

Instrucciones en Español

Tiempo/Fecha

1. MODE
Mantiénes presionado 3 segundos

SET → Selecciona AM, PM, or 24HR → SAVE
 SET → Selecciona hora → SAVE
 SET → Selecciona minuto → SAVE
 SET → Selecciona año → SAVE
 SET → Selecciona mes → SAVE
 SET → Selecciona día → SAVE

Cronómetro

1. MODE
Presionas uno vez

2. SET
iniciar / parar

3. CLEAR
eliminar

Función de bloqueo

(Impide la reprogramación, solo retroiluminación funciona mientras está bloqueado)

1.

Tiempo/Fecha modo

2. SET & SAVE 3 segundos =

3. SET & SAVE 3 segundos = desbloquear

Temporizador de Cuenta Atrás

1. MODE
Presionas dos veces

2. MODE
Mantiénes presionado 3 segundos

SET → Selecciona hora de inicio → SAVE
 SET → Selecciona minuto de inicio → SAVE
 SET → Selecciona hora de parada → SAVE
 SET → Selecciona minuto de parada → SAVE
 SET → Selecciona hora de intervalo → SAVE
 SET → Selecciona minuto de intervalo → SAVE
 SET → Selecciona sonido y vibración → SAVE

3. SET

4. SAVE

Eliminar Temporizador de Cuenta Atrás

1. MODE
Presionas dos veces

2. MODE
Mantiénes presionado 3 segundos

3. CLEAR
eliminar

Alarmas

1. MODE
Presionas tres veces

2. MODE
Mantiénes presionado 3 segundos

SET → Selecciona alarma 1-9 → SAVE
 SET → Selecciona hora → SAVE
 SET → Selecciona minuto → SAVE
 SET → Selecciona sonido y vibración → SAVE
 repite los pasos para configurar varias alarmas

3. SET

4. SAVE

Eliminar alarmas

1. MODE
Presiona tres veces

2. MODE
Mantiénes presionado 3 segundos

3. CLEAR
Sostiene eliminar todas

Limited Warranty

Your watch is guaranteed against defects for a period of 6 months from the date of purchase. The guarantee does not cover damage through accident, negligence, or misuse. This guarantee does not affect your statutory rights. **Knoxxwatches/PMD IS NOT LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.** Not covered by warranty: 1. Batteries, straps, and display screen. 2. Damage caused by accident, misuse, incorrect battery replacement, or lack of care. Your watch is water-resistant up to 10 ATM and can withstand activities such as swimming, bathing, & handwashing. Your watch should not be used for deep sea diving or in hot water. Do not press the watch buttons while underwater. If your watch requires attention under the terms of the warranty, please mail in the watch with proof of purchase and a brief note to explain the fault to the address listed. Do not send the watch packaging materials if claiming a faulty watch. If the watch is determined to be faulty within 6 months of purchase, Knoxxwatches/PMD will replace the watch free of charge but will not refund shipping or any other expenses. If the watch is determined to be functional and without defect, then it will be returned to the customer. Knoxxwatches/PMD will not refund monies for any watch that is worn or shows any wear or damage.

Battery Instructions

1

Remove the screws.

2

Remove the case back from the watch case.

3

Remove old battery and replace with new (+ positive side up).

4

Replace the screws.